

WARNING



Never attempt to carry out your own electrical work. It is dangerous, illegal and can be fatal. Always get a licensed electrical contractor to carry out any electrical work.

TIMER DISPLAY INACTIVE

- › Verify 24V supply to timer
- › Remove cable harness and re-connect
- › Disconnect and re-connect power
- › Possible backup battery failure

COUNTDOWN TIME WITHOUT OPERATION

- › Bridge 24V Hot and timer output
- › Check rotary switch

LOW PRESSURE FUNCTIONS OPERATIONAL BUT NO HIGH PRESSURE

- › Check pump drive belt
- › Check motor circuit breaker
- › Verify 24V output to motor contactor
- › Verify incoming supply voltage to motor
- › Check ALL fuses

SYSTEM RUNS AFTER TIME HAS EXPIRED

- › Disconnect timer output wire. Possible faulty timer.
- › Check motor starter contacts

Disconnect and re-connect power

TIME DOES NOT ACCUMULATE AFTER ACCEPTING COINS

- › Check timer programming
- › Check the timer and coin acceptor are wired correctly
- › Bridge coin common and coin signal (24V Hot or Common)
- › Manual pulse should be noted. Possible faulty timer.

WARNING



Never attempt to carry out your own electrical work. It is dangerous, illegal and can be fatal. Always get a licensed electrical contractor to carry out any electrical work.

HORN DOES NOT SOUND OR SOUNDS CONTINUOUSLY

- › Verify horn polarity AND labelled voltage
- › Check programming to verify horn is ON
- › Possible faulty horn

DISPLAY READS 'CLOSED' OR 'COIN'

- › Continuous coin pulse to timer from coin acceptor
- › Disconnect coin signal and verify
- › Possible faulty coin acceptor

DISPLAY READS 'ERROR'

- › Indicates loss of programming
- › Re-program timer
- › Possible power surge OR backup battery failure
- › Replace timer

DISPLAY READS 'FAIL'

- › Continuous coin signal
- › See previous advice

DISPLAY READS 'AUX'

- › Continuous signal to auxiliary input
- › Possible faulty timer

DISPLAY MISSING SEGMENTS

- › Replace timer